



THE SOUND SYSTEM INSTRUCTIONS HAVE CHANGED

IF YOUR iCOOL WAS MANUFACTURED AFTER FEBRUARY 2009 PLEASE REFER TO THESE NEW INSTRUCTIONS

Due to the ever increasing number of different iPod models, many of which have different electrical and control configurations on the Apple iPod plug, we have decided to remove the iPod type socket from the iCool system to avoid confusion and any risk of damage to customers iPods.

Your iCool sound system now has a standard phono plug. This is an international standard plug that will fit any music player on the market. This is a safer approach and still allows you to use any music player even iPods and iPhones.

The high quality sound is unchanged and you will get full fidelity and rich base through this standard plug.

There are 2 minor differences to the original instructions, first, your music player can no longer charge it's battery through the iCool, however most players today have very long battery life, so this function is not essential and avoids the risk of electrical incompatibility.

Second, you can no longer control the volume and track selection via the touch screen. This is not a problem as you can just as easily use the controls of your music player to do the same things.

9. USING THE SOUND SYSTEM ON MODELS AFTER FEBRUARY 2009

Your iCool TWIN has a very high quality sound system built into the cabinet. It can be used to play music from any iPod or MP3 player for relaxation or meditation while undergoing ice bath treatments, or to play instructions to athletes, or as a public address system. It is powerful enough to fill a large room with sound.



To turn on the sound system touch the  key **AND HOLD IT FOR 5 SECONDS TO ACTIVATE THE STEREO AMPLIFIERS**. Activation is indicated by a long beep sound and the SOUND SYSTEM icon (a picture of a loudspeaker) will appear on the LCD screen.

To turn the amplifiers off at any time repeat this step.

USING ALL TYPES OF IPODS OR MP3 PLAYERS OR OTHER SOUND SOURCES

Simply plug your music player into the standard Phono plug in the front of the iPod cradle. The cable can be extended a few centimeters to accommodate various size players.

You can no longer control your music player from the iCool touch screen. You must use your players built in controls as normal. **Because the volume will be controlled from your player please be careful that it is not set too high before you turn on the iCool music system.**

You can use the phono input for any kind of player or even a microphone. Some microphones have a very low output level and may need a separate pre amplifier (available from electronics stores everywhere) to be loud enough.